


Place the clutch/parking brake lever bracket on the handlebar and install the holder with the "UP" mark facing up.

Align the bracket holder end with the punch mark on the handlebar and tighten the upper screw first, then tighten the lower screw.

CLUTCH/PARKING BRAKE LEVER BRACKET

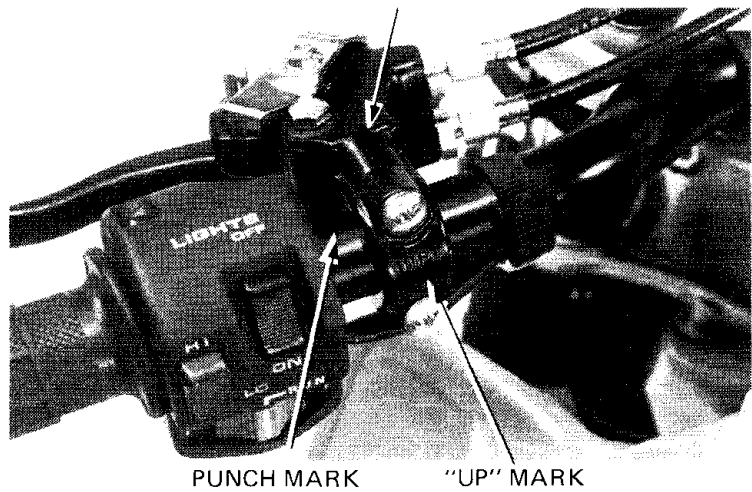


Place the front brake master cylinder on the handlebar and install the holder with the "UP" mark facing up.

Align the master cylinder holder end with the punch mark on the handlebar and tighten the upper screw first, then tighten the lower screw.

TORQUE: 10–14 N·m
(1.0–1.4 kg·m, 7–10 ft·lb)

FRONT BRAKE MASTER CYLINDER

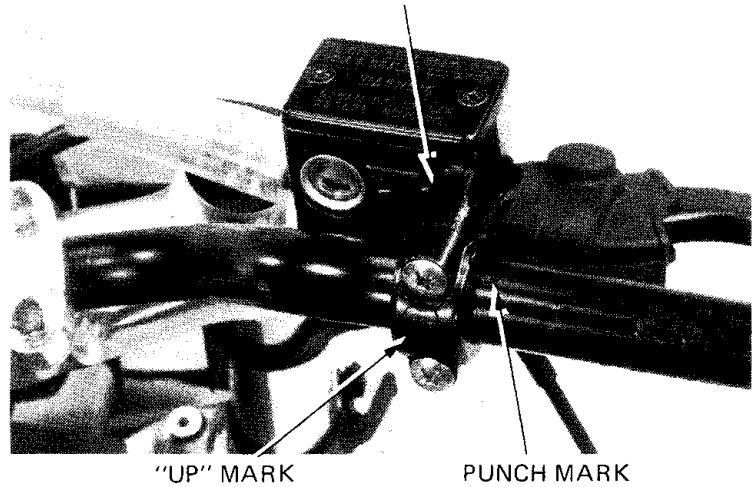

Place the throttle housing on the handlebar and loosely install the holder and screws.


Align the punch mark on the housing with the mating surface of the master cylinder holder, and tighten the forward screw first, then tighten the rear screw.

Perform the following inspections after installing the handlebar.

- Clutch lever free play (Page 2-17)
- Throttle lever free play and return (Page 2-10)
- Operation of parking brake lever (Page 2-15)
- Function of handlebar switch (Page 15-9)
- Operation of front brake lever (Page 2-16)

MATING SURFACE

PUNCH MARK

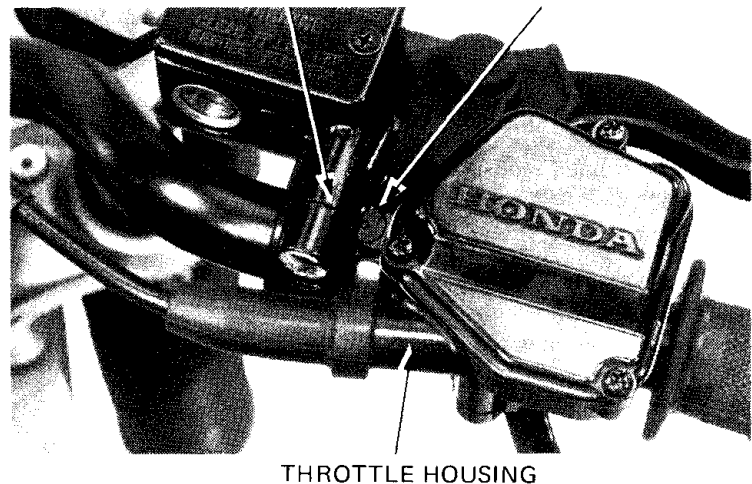

THROTTLE HOUSING