

Front arm

Install the front arms onto the frame and knuckle holder and tighten the bolts.


TORQUE:

Front arm-to-frame bolt:

30–36 N·m (3.0–3.6 kg-m, 22–26 ft-lb)


Front arm-to-knuckle holder bolt:

40–50 N·m (4.0–5.0 kg-m, 29–31 ft-lb)

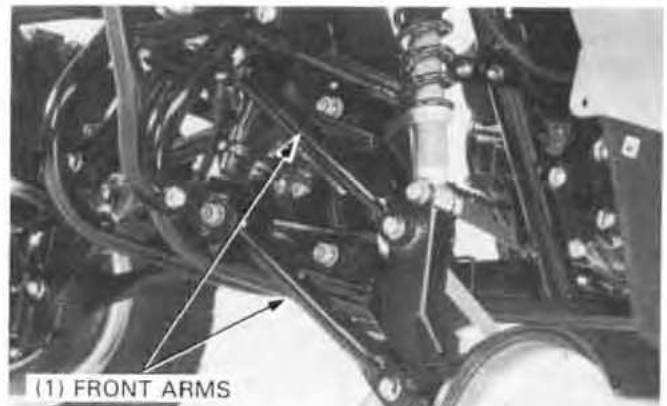

Install the front inner fender.

Install the front wheel (page 11-7).

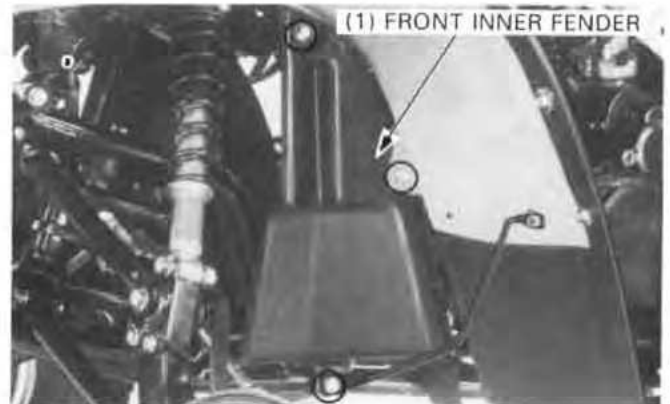

FRONT SHOCK ABSORBER

REMOVAL/DISASSEMBLY

Raise the front wheels off the ground with a jack or block under the front frame.

Remove the shock upper and lower mounting bolts and nuts.



Compress the front shock absorber with the shock compressor, adapter and attachment.

TOOLS:

- | | |
|---------------------------|-----------------------------------|
| Shock adsorber compressor | 07959–3290001 |
| Collar | 07967–GA70102 or
07967–GA70001 |
| Adapter | 07967–VM50100 |

