

# TABLE OF CONTENTS

	SECTION
<b>GENERAL, SPECIAL TOOLS AND SERVICE MATERIALS</b>	<b>0</b>
<b>PERIODIC MAINTENANCE SERVICE</b>	<b>1</b>
<b>TROUBLE SHOOTING</b>	<b>2</b>
<b>ENGINE</b>	<b>3</b>
<b>FUEL SYSTEM (CARBURETOR, AIR CLEANER FUEL PUMP AND FUEL FILTER)</b>	<b>4</b>
<b>EMISSION CONTROL SYSTEM</b>	<b>5</b>
<b>ENGINE COOLING SYSTEM</b>	<b>6</b>
<b>CAR HEATER</b>	<b>7</b>
<b>IGNITION SYSTEM</b>	<b>8</b>
<b>CRANKING SYSTEM</b>	<b>9</b>
<b>CHARGING SYSTEM</b>	<b>10</b>
<b>CLUTCH</b>	<b>11</b>
<b>GEAR SHIFTING CONTROL</b>	<b>12</b>
<b>TRANSMISSION</b>	<b>13</b>
<b>TRANSFER GEAR BOX</b>	<b>14</b>
<b>PROPELLER SHAFTS</b>	<b>15</b>
<b>DIFFERENTIAL</b>	<b>16</b>
<b>SUSPENSION</b>	<b>17</b>
<b>STEERING SYSTEM</b>	<b>18</b>
<b>BRAKES</b>	<b>19</b>
<b>BODY SERVICE</b>	<b>20</b>
<b>BODY ELECTRICAL EQUIPMENT</b>	<b>21</b>
<b>SERVICE DATA</b>	<b>22</b>