

## PREFACE

This manual covers the construction, function and servicing procedures of the Honda BF200A and BF225A outboard motors.

Careful observance of these instructions will result in better, safer service work.

Pay attention to these symbols and their meaning:

**▲ WARNING** Indicates a strong possibility of severe personal injury or loss of life if instructions are not followed.

**CAUTION:** Indicates a possibility of personal injury or equipment damage if instructions are not followed.

ALL INFORMATIONS, ILLUSTRATIONS, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. Honda Motor Co., Ltd. RESERVES THE RIGHT TO MAKE CHANGES WITHOUT INCURRING ANY OBLIGATION WHATEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION.

Honda Motor Co., Ltd.  
Service Publications Office

## CONTENTS

<b>SPECIFICATIONS</b>	<b>1</b>
<b>SERVICE INFORMATION</b>	<b>2</b>
<b>MAINTENANCE</b>	<b>3</b>
<b>ENGINE COVER/COVER LOCK</b>	<b>4</b>
<b>PROGRAMMED-FUEL INJECTION</b>	<b>5</b>
<b>ALTERNATOR/TIMING BELT</b>	<b>6</b>
<b>ENGINE REMOVAL/INSTALLATION</b>	<b>7</b>
<b>WATER JACKET/RELIEF VALVE/ FLUSH VALVE</b>	<b>8</b>
<b>CYLINDER HEAD/VALVES</b>	<b>9</b>
<b>FLYWHEEL/OIL PUMP</b>	<b>10</b>
<b>CYLINDER BLOCK/CRANKSHAFT/PISTON</b>	<b>11</b>
<b>PROPELLER/GEAR CASE/EXTENSION CASE</b>	<b>12</b>
<b>OIL PAN/MOUNTING CASE</b>	<b>13</b>
<b>SWIVEL CASE/POWER TRIM/TILT ASSEMBLY</b>	<b>14</b>
<b>STEERING ROD/REMOTE CONTROL BOX</b>	<b>15</b>
<b>CABLES/SHIFT LINK BRACKET/SHIFT ARM</b>	<b>16</b>
<b>ELECTRICAL EQUIPMENT</b>	<b>17</b>
<b>OPERATION</b>	<b>18</b>
<b>WIRING DIAGRAM</b>	<b>19</b>